

Button & Icon Overview

AC/Battery Icon



Invisible = No power fault.
Solid Red = AC &/or battery failure is present.

Away Arm Button

Arm

Solid White = Away disarmed for all areas.
Solid Red = One or more areas are armed.

Stay Arm Button

Stay

Solid White = Stay disarmed for all areas.
Solid Red = One or more areas are stay armed.

Cancel Button

Cancel

Press to perform the following functions:
Clear an incorrect code.
Cancel arming during exit delay.
Return back to the home screen.



Running Person Icon



Invisible = No open/active inputs.
Solid White = An input from 1-248 is open/active
Flashing White = Currently displaying open/active inputs (from 1 -8 only).

Info Button



Solid White = Everything OK.
Solid Red = There is a current system fault.

Code Entry Indicators




Displays how many digits are currently input on the keypad. Press Cancel button to clear.

Enter/Confirm Button





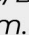
Must be pressed after code entry for code to be accepted or action to be performed.

Menu (Settings & Diagnostics)

- Press the Info icon  found on the home screen to access the menu.
- Each number represents the following functions from within the menu:

- 1. Installer Programming** - Requires installer code to access this function.
- 2. Alarms/Activations** - Shows activated inputs from the previous arm cycle (only displays inputs 1 - 8).
- 3. Current System Faults** - Each fault within option 3 is indicated by a number as detailed below:

- | | |
|--|---|
| 1. System Tamper Alarm | 5. Communicator Failure |
| 2. Input Tamper Alarm (wired or wireless) | 6. Wireless Device Battery Low |
| 3. Supervision Alarm | 7. Remote Battery Low |
| 4. Fuse Failure | 8. Excessive Wrong Code Attempts |

- 4. Sleep Options** - Select the preferred option from 1 - 3 below then press  to confirm.
 1. Illumination will time out after 30 seconds & will only wake when touched.
 2. Illumination will time out after 30 seconds & will wake with any sensor movement.
 3. Illumination is on continuously.
- 5. Brightness** - 1 = Least bright & 6 = Most bright. Once selected, press  to confirm.
- 6. Beep/Buzzer** - 1 = Lowest frequency & 9 = Highest frequency. 0 = Beep/Buzzer OFF
Select the preferred option followed by  to confirm.
- 7. Open/Active Inputs** - Displays any input (from 1 - 8 only) that is open/active. Open/Active inputs above 8 can not be viewed on the EC-KP due to the nature of the display.

