


# RX-16 MF9

915MHz

## Multi Function 915MHz Elite Control Receiver

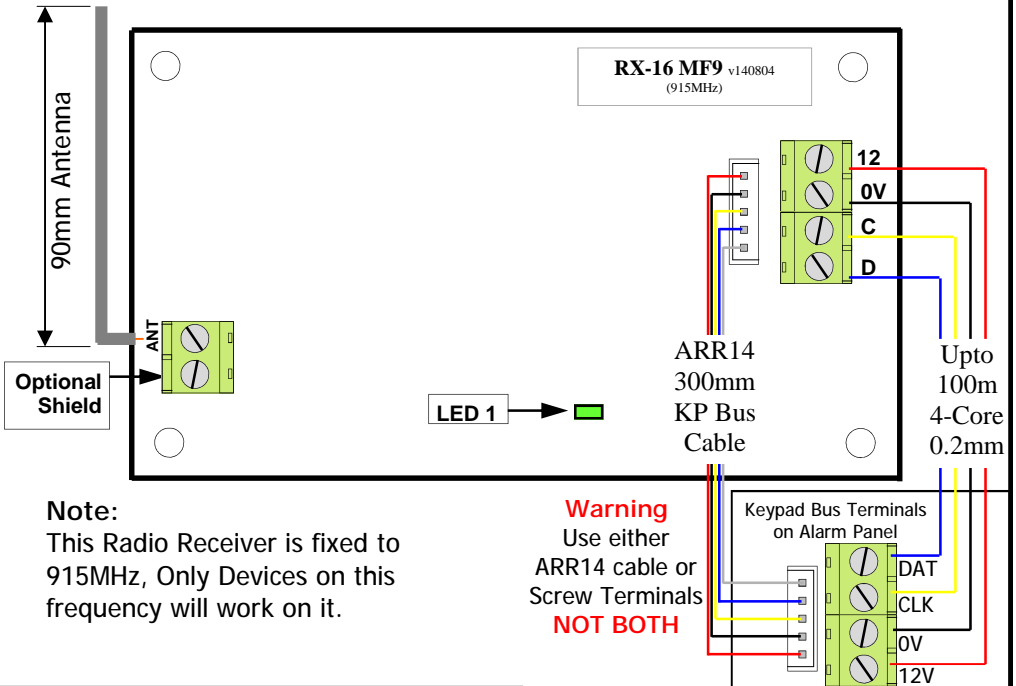

### Compatible Radio Devices: 915MHz



RM-8003B



RM-8006B



TX-LIGHT/915



TX-1/915



DFW-915



HM-FW-915



MEDI TX-915

### Compatible Panels:

ESX-1, ESL-2, ESL,  
Elite-S, Elite-8D,  
Elite-16D v6, AC2-W



# RX-16 MF9 (Programming)

ESL-2 Programming option.

To do this Programming you must be in Installer Programming Mode.

## Pendant 0

P 18 E 40 E E (Press button you want to **Arm**)

P 18 E 50 E E (Press button you want to **Disarm**)

P 18 E 60 E E (Press button you want to **Trigger Output 3**)

P 18 E 70 E E (Press button you want to **Trigger Output 4**)

## Pendant 1

P 18 E 41 E E (Press button you want to **Arm**)

P 18 E 51 E E (Press button you want to **Disarm**)

P 18 E 61 E E (Press button you want to **Trigger Output 3**)

P 18 E 71 E E (Press button you want to **Trigger Output 4**)

## Pendant 3

P 18 E 43 E E (Press button you want to **Arm**)

P 18 E 53 E E (Press button you want to **Disarm**)

P 18 E 63 E E (Press button you want to **Trigger Output 3**)

P 18 E 73 E E (Press button you want to **Trigger Output 4**)

## Pendant 4

P 18 E 44 E E (Press button you want to **Arm**)

P 18 E 54 E E (Press button you want to **Disarm**)

P 18 E 64 E E (Press button you want to **Trigger Output 3**)

P 18 E 74 E E (Press button you want to **Trigger Output 4**)

## Wireless Detector Zone 9

P 164 E 9 E E (trigger the device you want to learn in)

P 122 E 9 E *turn ON options 1 & 5* (sets zone to wireless zone)

## Wireless Detector Zone 10

P 164 E 10 E E (trigger the device you want to learn in)

P 122 E 10 E *turn ON options 1 & 5 E* (sets zone to wireless zone)



ESL-2

For other programming options please  
read the Full installation manual

← Quick-Links →  
To Full Installation Manuals



ESX-1